

 LAKELAND

# My Kitchen

## USER MANUAL STICK BLENDER SET

Model: 13651

Helpline No: 015394 88100

**The Lakeland Guarantee....**

is probably the simplest guarantee in the world!  
If you are not satisfied at any time, you receive your money back!  
This is our promise.


**Lakeland**

Alexandra Buildings, Windermere, Cumbria LA23 1BQ  
Tel: 015394 88100 Web: [www.lakeland.co.uk](http://www.lakeland.co.uk)



## INTRODUCTION

Thank you for choosing this stick blender set from My Kitchen, a hard-working range of everyday cooks' essentials by Lakeland. Please take a few moments to read these instructions before using your blender for the first time, and keep them in a safe place for future reference.

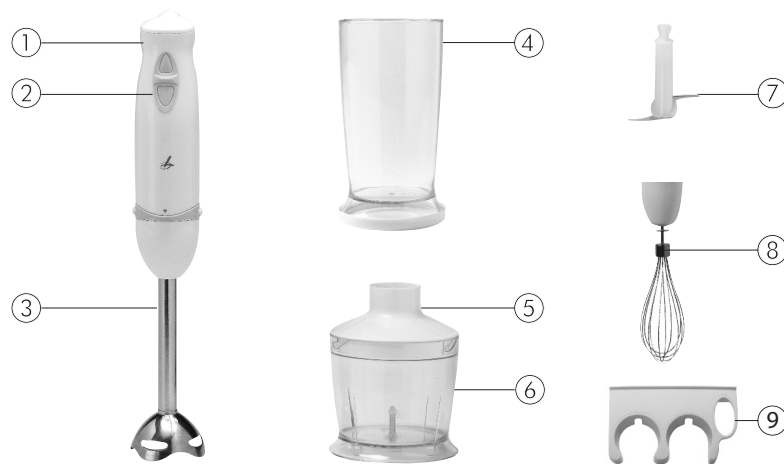

## FEATURES

1. Power handle
2. Two speed buttons
3. Blender stick
4. 500ml blending beaker with lid/base
5. Chopping bowl cover
6. 500ml chopping bowl
7. Chopping blade
8. Balloon whisk
9. Wall mount (fixings included)

Operating voltage: 230V~50Hz

Power: 400W

## IMPORTANT SAFEGUARDS

When using this stick blender, please follow these basic safety precautions.

1. Please read all instructions before using.
2. Make sure your electricity supply matches the voltage shown on the appliance.
3. This blender is for household use only. It is not suitable for commercial use, or for use outdoors. It must only be used for its intended purpose.
4. Do not let the power cord hang over the edge of the worktop or table, or touch hot surfaces, such as stovetops.
5. To avoid electric shock, do not immerse the power handle, cord or plug in water or any other liquid. Please do not operate with wet hands, and never allow the cord or plug to get wet.
6. Handle the blender stick and chopping blade with care, especially when cleaning; they are very sharp. Never touch the blades when the blender is plugged in. Hold the chopping blade by its plastic spindle.
7. Make sure all parts are locked into place before switching on.
8. Keep fingers, hair, clothing and utensils well away from moving parts.
9. To avoid overheating, run the blender for up to 1 minute at a time when preparing soft ingredients, or 15 seconds for hard foods.
10. Always allow hot liquids to cool before blending.
11. Always switch off and unplug the blender before adding or removing parts, after use and before cleaning.
12. Using attachments not supplied by the manufacturer may lead to electric shock, fire or injury.
13. The blender is not intended for use by children or infirm people unless they have been adequately supervised by a responsible person to ensure they can use it safely. Children should be supervised to ensure they do not play with the blender. It must not be left unattended during use.

14. Do not use the blender if the power cord or plug show any signs of damage, or if the appliance is dropped, damaged or working incorrectly. Call the helpline on 015394 88100 to arrange a repair by an authorised repairer, or a replacement. Never try to repair the blender yourself as this may cause electric shock.

#### **BEFORE USING FOR THE FIRST TIME**

Carefully unpack the blender and accessories, and remove any packaging. Wipe the power handle with a damp cloth, then dry. Do not immerse in water. All other parts can be cleaned in warm, soapy water, or in the dishwasher.

CAUTION: please handle the blender stick and chopping blade with extreme care.

#### **BLENDING**

Soups, sauces, dips, mayonnaise, milkshakes and baby food can be blended in moments. Use the blending beaker, your own mixing bowl, or blend directly in a saucepan (take the pan off the heat and allow the contents to cool first).

CAUTION: before preparing baby food, always ensure the blender is thoroughly sterilised.

1. Push the blender stick onto the power handle, and turn until it locks. Plug into the mains socket.
2. To prevent splashing, lower the blender stick into the food before switching on – press the top button for low speed and the bottom button for high speed. Keep a firm hold of the beaker, bowl or saucepan handle as you blend. TIP: the lid of the blending beaker doubles up as a base to help keep the beaker steady on your worktop.
3. Keep the blender upright and do not let any liquid reach the power handle. Release the speed button at any time to change speed or stop blending.
4. Unplug before removing the blender stick and cleaning.

#### **WHISKING**

The balloon whisk is suitable for whipping cream, egg whites, light sponge mixes and instant desserts.

1. Push the blender stick into the whisk collar, and turn until it locks. Plug into the mains socket.
2. To prevent splashing, lower the whisk into the food before switching on – press the top button for slow whisking and the bottom button for fast whisking. Keep a firm hold of the beaker or bowl as you whisk.
3. Keep the whisk upright and do not let liquid reach the whisk collar. Release the speed button at any time to change speed or stop whisking.
4. Unplug before removing the whisk and cleaning.

#### **CHOPPING**

Meat, cheese, onion, fresh herbs, garlic and nuts can all be successfully chopped using the chopping bowl and blade. However, hard foods such as coffee beans, ice cubes, nutmeg and spices will damage the blade and should be avoided.

1. Carefully remove the safety cover from the chopping blade. Holding the blade by its plastic spindle, lower it onto the pin in the chopping bowl.
2. Cut your ingredients into small pieces (up to 1"/2.5cm) and add to the chopping bowl. See CHOPPING GUIDE.
3. Place the cover on the chopping bowl. Fit the power handle into the cover, turning until it locks into place.
4. Plug into the mains socket. Take a firm hold of the chopping bowl and switch on – press the top button for low speed and the bottom button for high speed. Release the button at any time to change speed or stop chopping.
5. When you have finished chopping, unplug and remove the power handle from the bowl cover.
6. Be sure the blade has completely stopped before removing the cover. Carefully lift out the blade, then empty the bowl.

## CHOPPING GUIDE

FOOD	MAXIMUM QUANTITY	APPROX. TIME
Meat	250g	15 secs
Fresh herbs	50g	10 secs
Almonds, walnuts	150g	15 secs
Cheese	100g	10 secs
Bread	80g (1 or 2 slices)	10 secs
Onion	200g	10 secs
Biscuits	150g	10 secs

## CARE AND CLEANING

Always unplug the blender before cleaning. Wipe the power handle with a damp cloth, then dry. Do not immerse in water. All other parts can be washed in warm, soapy water, or in the dishwasher. Take care not to touch the sharp blades. If carrots etc have discoloured the plastic, rub with a cloth dipped in vegetable oil.

PLEASE NOTE: the blending beaker and chopping bowl are not microwave-safe.

## RECYCLING YOUR ELECTRICALS

Along with many other high street retailers, Lakeland has joined a scheme whereby customers can take their unwanted electricals to recycling points set up around the country. Visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) to find your nearest recycling point.




## ELECTRICAL CONNECTIONS

### THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications. If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid an electric shock, do not insert the discarded plug into a socket.

#### Fitting a new plug

If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown here. The wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

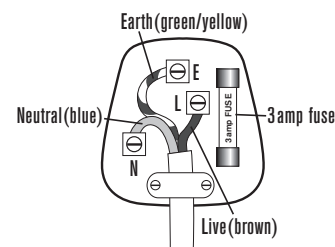

Connect BLUE to Neutral (N)

Connect GREEN & YELLOW to Earth (E)

Connect BROWN to Live (L)

3 amp fuse to be used

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows. The wire which is coloured green and yellow **MUST** be connected to the terminal which is marked with the letter E (Earth) or coloured green. The wire which is coloured blue **MUST** be connected to the terminal which is marked with the letter N (Neutral) or coloured black. The wire which is coloured brown **MUST** be connected to the terminal which is marked with the letter L (Live) or coloured red.

Before refitting the plug cover, check that there are no cut or stray strands of wire inside the plug. Use a 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are at all unsure which plug or fuse to use, always refer to a qualified electrician.

Note: after replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EEC Directives: 73/23 EEC (Low Voltage Directive) and 89/336 EEC (EMC Directive).